

Software check and upgrade

Preparation to upgrade software

- 1) Start the USB burning software & create a folder named "UPG_ALL"
- 2) Then copy the Bin file (BDP_5200.bin) into it,
- 3) Burn the data onto the blank USB.

4) If the model is BDP5200, must use (BDP_5200.bin) to upgrade

A. Procedure for software upgrade

A) Upgrade software via Disc

1) Power on the set and insert the prepared Upgrade CDR.

2) The set will start reading disc & response with the following display TV screen:

Now searching for upgrade software!

Please wait...!

3) Wait for a few seconds after the screen will display :

Upgrade software for this player have been found. Do you want to upgrade?

Cancel

Start

4) Press Right cursor button to choose "Start", then press <OK>;

5) The software will upgrade and screen will display as below:

Upgrade is ongoing, Please wait...

Please do not unplug or switch off the device.

6) The screen will display as below when upgrading complete:

Upgrade has completed successfully!

Power off after 5s.

Restart now

5) Restart the set.

B) Upgrade software via network:

1) Setup the network connection (See "Getting started">"Set up network").

2) In the Home menu, select <Setting>-<Advanced Setup>-<Software Download>-<Network>.

* You are prompted to start upgrading processes if upgrade media is detected.

3) Follow the instructions on the TV screen to confirm update operation.

* Once software update is complete, this player automatically turns off to standby.

4) Disconnect the power cord for a few seconds and connect again to turn on the player.

C) Update software via USB Flash Drive:

1) Go to www.philips.com/support to check if the latest software version is available for this player.

2) Download the software onto a USB flash drive.

3) Insert the USB flash drive to the USB jack of the rear panel.

4) In the Home menu, select <Setup>-<Advanced Setup>-<Software Update>-<USB>.

5) Follow the instructions on the TV screen to confirm update operation.

* Once software update is complete, this player automatically turns to standby.

6) Disconnect the power cord for a few seconds and connect again to turn on the player.

B. Read out the software versions to confirm upgrading

1) Power on the set and open the tray door.

2) Press <Home> button on the remote control.

3) Select <Setup>, then press <OK>.

4) Select <Advanced Setup>, press right cursor to choose

<Version Info.>, then press <OK>, the software version and other information will display on the TV screen as below:

Model:BDP5XXX/XX

Versions:

<http://www.philips.com/support>

MAC:XX-XX-XX-XX-XX-XX

Caution: The set must not be power off during upgrading, otherwise the Main board will be damaged entirely.