Chapter5 Factory mode and notice

Data in Factory mode is strictly prohibited to adjust without the author's approve because the data is closely relative to TV's performance.

1. Factory mode

This mode is mostly used in adjust balance and setup some special data.

2. Enter into factory menu

Entering "2580" continuously after pressed "INPUT", you can enter into factory mode menu.

2.1 Factory menu and setup

2.1.1 How to adjusting the factory menu

You can see a software version and its issued date displaying in the LCD TV.

Use "UP" / "DOWN" keys selecting the item and "LEFT" / "RIGHT" Keys debugging it.

2.1.2 The following items can be selected and adjusted of the factory menu about 1s16:

Factory Menu

Video Quality

Picture Mode

Contrast

Brightness

Sharpness

Color

Save to EEPROM

White Balance

Source	YPbPr
R-Gain	
G-Gain	
B-Gain	
R-Offset	
G-Offset	

B-Offset ADC Auto MACE Setting Input Source TV Color Mode Color Temp. Red Color Temp. Green Color Temp. Blue Save to EEPROM Advanced Setting (Don't adjust this item) About (software version and its issued date)

The following items can be selected and adjusted of the factory menu about ls16W:

Video Quality

Picture Mode Contrast Brightness Sharpness Color Save to EEPROM

White balance

R-Offset G-Offset B-Offset R-Gain G-Gain B-Gain Save to EEPROM

Factory Option

AGING Mode

Color Temp

Restore Default

 
(Software version)

YPBPR Phase

Phase

Chapter 6 The flow of software update and noticeable proceeding

7.1 、 The connection of the equipment is shown bellow:



7.2 software update flow

Use the application software ISP_Tool_V4.3.3.exe (the following digit means the version of this software)

Open this application software, as is shown bellow:



7.2.1 First, test the connection

Press the button "Connect", the computer will display " Device "on the screen when it is well connected , if not, please check the connection again.

- 7.2.2 Press button "Read" when the connection is OK to load the software
- 7.2.3 Press button "Auto" to write the software into the flash

MStar ISP Utility V4.3.3										
	Auto B. P. V.	Restore	P HDCP	🥑 Erase	Config	e Connect	🥦 Dis Con			
Checksum: ● 0x00 ○ 0xFF End Addr.: 0x000000										
Batch File Elapsed Time: I2C Printer 40KHz										

MStar ISP Utility V4.3.3										
Sevice	💊 Load	🍼 Read	🔀 Auto	الي الم B. P. V.	Restore	P HDCP	E rase	Config	e Connect	🥦 Dis Con
Source File: D:\LS03\欧洲机\ChangHong\PROJECT\MARIA3_CHINA_256K\MARIA3.BIN 2007-7-30 2										
	ad File :cksum :		— HDCP Kev ♯							
	store Data		▼ Progr ▼ Verify	am						
	se Device		Exit IS							_
	File Area Erase Area	■	irst 512	KBytes	2	Run				
	Partial Era	ise Se	etup							
Elapsed Time	в:		I2C			Printer 4	OKHz			

The softeware will be provided according to custom' s request.